


Removal

1 Pull off knobs of heater regulation left (1) and right (2), as well as of blower switch (3). (Knobs are mounted conically).

The bulbs of the switches can now be pulled out of socket.


1st version

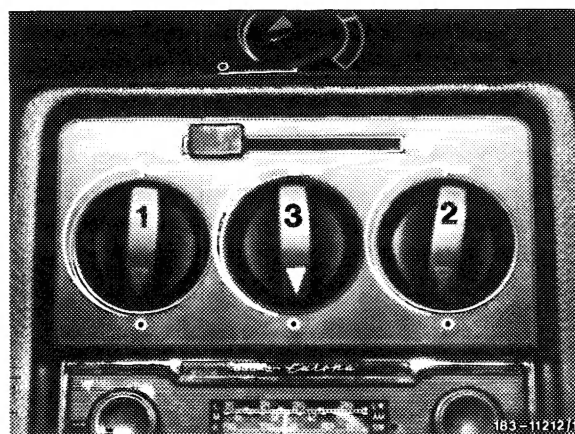

2nd version



2 Remove cover of operating system (5) by unscrewing nuts (6) and pulling off knob of air flap (7).

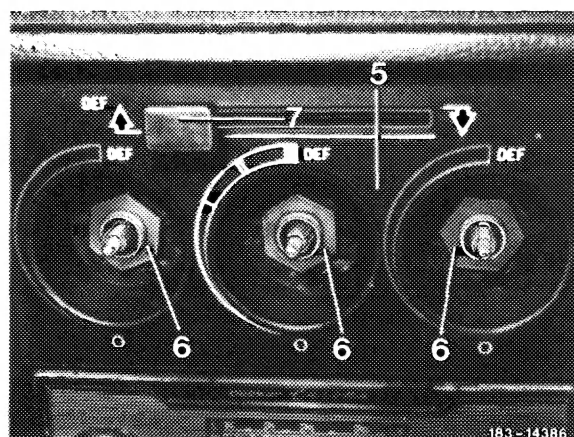

3 Pull sockets (1) out of cover (2).

Installation

4 For installation proceed vice versa.

When inserting bulb, make sure that the contact springs of the switches or sockets are not distorted.

